

Optional Accessories



Extra Regular CO² Tank
(for Large Bleacher Reacher Pro)
\$35 each



Deluxe Co2 Fill Station
\$80 each
Deluxe Two Valve CO₂
Cylinder Fill Station



O-Rings(pack of 10)
\$5.00 per pack

O Rings - O Rings are used to seal your CO2 bottle into your launcher, occasionally they become damaged, worn and will need replacing.



Quick-Disconnect
Hose \$59 each

This allows you to connect your launcher directly to a bulk CO2 tank, providing a direct and continuous air source without the use of a CO2 tank. The quick disconnect comes with a 2-piece adapter that screws directly into your launcher where the CO2 tank usually goes and a braided hose with air fitting to adapt directly to a bulk tank



Replacement Gauge
\$20 each



Professional Fill Station with Muffer
\$199 each

The best professional fill station on the market! The muffer reduces noise while the fill station itself makes filling tanks much faster than dual valve fill stations and very durable.



Digital Scale
\$35 each

This optional accessory allows you fill your own CO2 tanks by weighing them accurately



www.TSHIRTGUN.com



BLEACHER REACHER MEGA T-SHIRT LAUNCHER MANUAL





WARNING! The T-Shirt Launcher Series are not toys. Misuse may cause serious injury or death. **The launcher should never be pointed at any person or animal!!** Recommended at least 18 years of age to operate. Use of CO2 air source required for proper operation – note: no other air types should be used with these devices. PSI should not exceed 80psi on the Bleacher Reacher Mega.

Cleaning and Lubrication

The anodized parts of your launcher should be cleaned off with a damp cloth. *DO NOT run the launcher under water to clean, as this will damage the internal components.* Only O-ring safe oils and lubricants should be used. The Launcher regulators require silicon grease and must be kept clean – recommended every 500 shots. Always use War Machine replacement parts.

****NOTE* Please read all instructions before operating launcher or attaching CO² tank***

Operation and Use

Step 1: *Attach CO2 Air source by screwing bottle into launcher.*



Limited Lifetime Warranty

War Machine Inc. warranties to initial retail purchaser that the product is free from defects in materials and workmanship, subject to the limitations of the warranty. Disposable parts (o-rings, seals etc) are not warranted. The use of non sanctioned accessories or upgrades is not covered and will void your warranty. This warranty does not cover aesthetic damages (scratches, dents and nicks) misuse, or improper disassembly and re-assembly, or attempts made to drill holes, remove metal or modify this product from its original state, which could cause pressure safety factors or degrade the performance. This warranty does not cover failures due to wear and tear, exposure to the elements or extreme conditions. This warranty is limited to the repair or replacement of defective parts with the customer to pay shipping costs. This limited lifetime warranty is effective to the original customer with proof of purchase and proper warranty registration. The warranty is non-transferable. Repair or replacement of defective material is at the discretion of WAR MACHINE INC.

 
Warranty Claim/Return Policy

For any warranty return/claim needed, please contact our RMA claims department at 1-864-877-1179. An RMA number must be issued prior to any warranty return. Please be sure to mail your warranty registration card found in your shipping package for proper registration of your War Machine Product. All returns will be shipped pre-paid to:


**War Machine Warranty Depot
1425 W Wade Hampton Blvd
Greer, SC 29650**

Folding Tips for T-Shirts


1. Fold T-Shirt in half

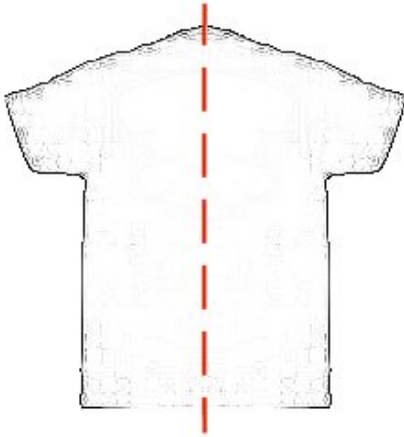

 
2. Fold Sleeves in

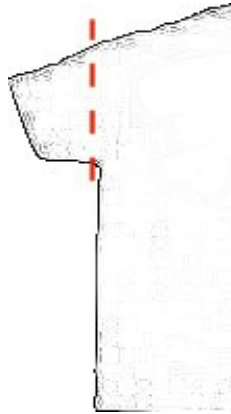

 3. Fold in half again

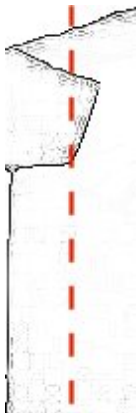

 4. Starting from the neck, begin a *tight* roll. As the roll is done, a slight pull on the opposite end will insure the tightness of the roll.

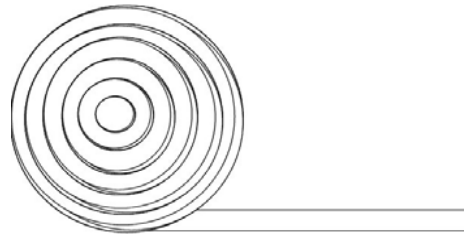

5. Test to make sure the shirt fits into the barrel of the launcher easily – if it does, the roll should be secured with rubber bands, balloons, tape, etc. to make sure it maintains a tight roll.

Note: The tighter the shirt fits into the barrel, the farther it will travel. Likewise, distance is affected by how loose the roll is in the barrel. A tightly rolled shirt will go farther in distance than a loosely rolled shirt.

Step 2: Check reg for pressure (80psi max) If the gauge exceeds max pressure, there is a safety relief valve that will vent over pressure



Step 3: Depress safety, *Pull trigger to shoot.*



When finished with the launcher...

1. Turn the ON/OFF valve to the OFF/CLOSED position. Discharge the launcher by pulling the trigger several times.

CAUTION Do not proceed if the gauge shows pressure – doing so will damage the CO2 O-Ring.

2. Remove the CO2 tank and store the launcher.

***** CAUTION – FEDERAL LAW *****

All CO2 must be emptied from tanks before air travel or shipping via common carriers. This is a Federal Regulation subject to heavy fines. Be sure to empty/bleed all air from your tanks using the method described above.

Special Tech Notes

The Mega has a pressure relief valve to prevent over pressurizing that will vent around 100 psi.

The Mega will not shoot unless the safety button is depressed.

The Mega has a 9-volt battery in the handle. We recommend changing this battery every 6 months.

TO FILL YOUR OWN CO2 TANKS:

You will need: A 20lb or larger bulk tank from your local Gas/Welding supplier, the Fill Station included with your launcher, and your CO2 tanks. (A digital 10lb scale is also highly recommended)



To fill the tank: Filling a CO2 tank is simple but it can be dangerous if you are not careful. Screw the tank into your fill adapter (PIC 1) and tighten down the pin depressor until you feel resistance. (PIC 2) With the bleed valve open (shown in PIC 2), any CO2 in your tank will escape, chilling the tank. If your tank is empty, you should close the bleed valve on the fill station (PIC 3), open the valve on your bulk tank (PIC 3) and fill to about 2oz on your scale. Turn bulk tank OFF and open bleed valve to empty your CO2 tank and chill. (PIC 3) Now you are ready to fill your tank. With the bleed valve closed on your fill station and the bulk tank turned on, you will fill a twenty-ounce tank to about seventeen ounces. This way if the gas expands, your tank pressure will not rise above safe levels. Close your bulk tank valve, and unscrew the fill adapter until you feel the resistance of the valve pin decrease sufficiently. Open the bleed valve to bleed the excess CO2 that's in the line and unscrew the CO2 tank. Your 20oz tank is now filled. Repeat as needed for multiple tank fills.