

# Micro Mini Confetti Adapter

Installation instructions



## PARTS LIST



CONFETTI ADAPTER  
PLATE



OUTER BARREL



INNER CONFETTI BARREL



(3) - 10-32 1"  
flathead screw



(3) - 10-32 1"  
thumb screw

## STEP 1

**! WARNING! - REMOVE THE CO2 TANK AND DE-GAS THE CANNON BEFORE ASSEMBLY.**



Unscrew the three barrel screws to remove the t-shirt barrel.

## STEP 2

Unscrew the three screws to remove the t-shirt barrel adapter plate.



BEFORE



AFTER



## STEP 3



NOTE THE POSITION OF THE BARREL ALIGNMENT SCREW FOR LATER STEPS.



SHOWN ATTACHED

## STEP 4



Place the outer barrel onto the adapter. Be sure to line up the pre drilled holes of the barrel with the holes in the adapter.

**STEP 5**

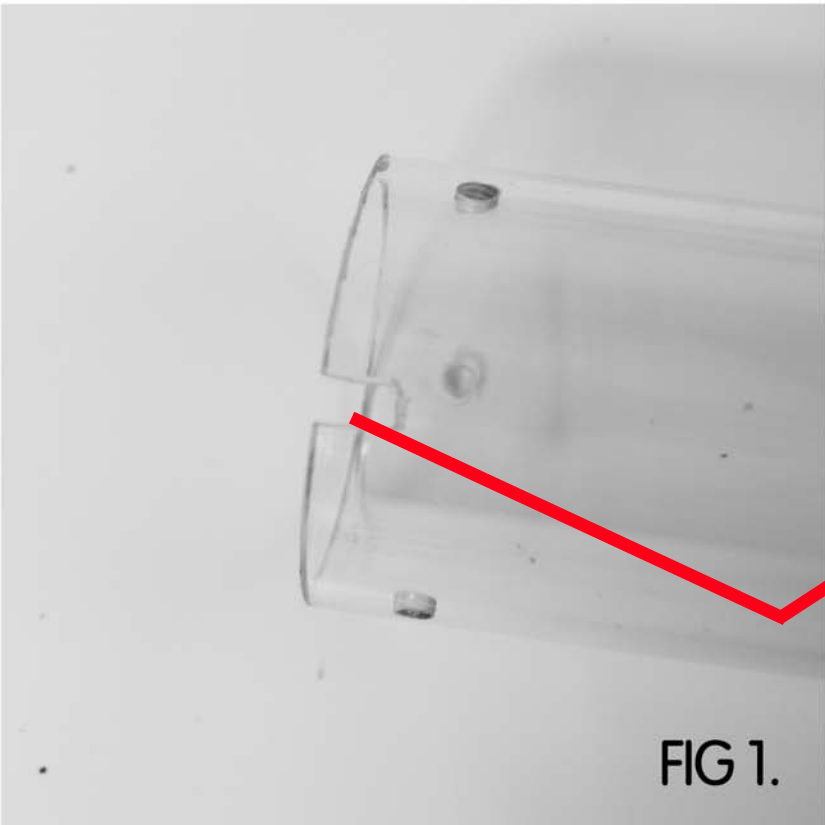


FIG 1.



FIG 2.

Place the inner barrel inside the outer barrel. Make sure that the notch in the barrel ( FIG 1. ) is slid over the barrel alignment screw ( FIG 2. )

**STEP 6**



Secure both barrels with the 3 supplied thumb screws.